


HOW TO USE THE LOW-PROFILE LOCK SYSTEM



STEP 1: Insert the key into the lock with the key horizontal in your hand and the raised tab on the tip of the key in the 3 o'clock position.

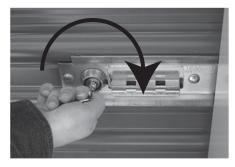

STEP 2: Turn the key clockwise 90 degrees.



STEP 3: When unlocked, the entire lock cylinder and key will pull out together as one piece. **DO NOT** attempt to separate the key from the lock cylinder.



STEP 4: With the lock cylinder removed, move the latch to the left to unlatch the door and to the right to relatch it.



STEP 5: To lock the door, reinsert the cylinder with the key in a vertical position and the flat side of the cylinder facing towards the ground.



STEP 6: Turn the key counterclockwise 90 degrees so the key is once again horizontal in your hand and pull the key from the lock.